Simplified Procedure For LENA Testing

Initial Start-up

- 1. Setting Up GSEOS for monitoring. If, at some point a problem develops, try the following procedure. This part should not, in general, have to be done.
 - a. On LENA machine 2 (room 148), go to D:\GSEOS4.0\prj\image\run
 - b. look for GSEOS.ini, which is the major configuration file
 - c. open by double clicking
 - d. check for:
 - i. In the "[Bios]" section, check for simulation=Ground
 - ii. In the "[Recorder]" section, check for Data Path=D:\GSEOS4.0\prj\image\run\Lena\data\... (rest will change, for example for the January 2000 full functional tests FFT Jan2000)
 - iii. Save as itself (as a text file, not word)
- 2. Doubleclick GSEOS (Image V2.0 [Image V2.1 for the LENA-1 machine])
- 3. Make connection
 - a. Goto Tools-NET
 - b. Click on appropriate client (e.g. FEDS5). In the event it is not known what the correct client is, contact Brent Parker or the SMOC (x61180) for the information.
 - c. click connect
 - d. click Net Enable
- 4. Goto Message Screen

Message screen says "connected" (along with	
some other messages)	PASS

- 5. Turn on recorder
 - a. Goto Tools-Recorder
 - b. Click on "file"
 - c. Check the box at the right
 - d. Select the location of the recorder files (\Lena\data\FFT_Jan2000)
 - e. Click status ON Click edit recording list
 - c. Check for "TLM" in "selected" panel
 - d. If it is not present, click it and then hit "Add"

"TLM" is selected	PASS

- e. Hit OK to exit box
- f. Hit record

Script lena_on_amb	Script	lena	on	amb	
--------------------	--------	------	----	-----	--

~ -	<u>-</u>	
1. Author	ize LENA command C_SI_LENA_PWR_ON	
2. Goto N	formal HK Screen. Check:	
	LENA's software version is 31 LENA's program mode is "RAM"	PASSPASS
3. Goto pt	test screen	
	Check status of Critical HK (should pass) Check status of TOF overcount (should pass) Check status of Memory (should pass)	PASS PASS PASS
4. Note the execute	at the TOF subsystem test will probably fail and the two HV ed.	PS tests are not
Script ler	na_hvramp_amb	
1. Author	ize LENA command L_SYS_HVP_VTHR to set the high vo	oltage thresholds
2. Goto di	agnos.scr (probably part of HK screen)	
	MCP start, stop, collimator (plus and minus), and optics voltage thresholds read decimal 128	PASS
3. Author	ize LENA command L_SYS_HVP_ITHR to set the current to	thresholds
4. Goto di	iagnis.scr (probably part of HK screen)	
	MCP start, stop, collimator (plus and minus), and optics current thresholds read decimal 128	PASS
5. Author zero.	ize LENA command L_HVP_MSTR_CMD to command the	e MCP start to level
	Check to make sure the number of sent commands has incremented by one	PASS
6. Author zero.	ize LENA command L_HVP_MSTP_CMD to command the	MCP stop to level

Check to make sure the number of sent commands has incremented by one	PASS
7. Authorize LENA command L_HVP_OPT_CMD to command the optics	s to level zero.
Check to make sure the number of sent commands has incremented by one	PASS
8. Authorize LENA command L_HVP_COLP_CMD to command the possupply to level zero.	itive collimator
Check to make sure the number of sent commands has incremented by one	PASS
9. Authorize LENA command L_HVP_COLN_CMD to command the neg collimator supply to level zero.	gative
Check to make sure the number of sent commands has incremented by one	PASS
10. Authorize LENA command L_HVP_OPT_EN to enable the optics sup	pply.
11. Goto Nom2-HK screen (part of HK)	
Check to make sure the optics enabled flag has tripped	PASS
12. Authorize LENA command L_HVP_COLP_EN to enable the positive supply	collimator
13. Goto Nom2-HK screen (part of HK)	
Check to make sure the collimator positive enabled flag has tripped	PASS
14. Authorize LENA command L_HVP_COLN_EN to enable the negative supply.	e collimator
15. Goto Nom2-HK screen (part of HK)	
Check to make sure the collimator negative enabled flag has tripped	PASS

Script lena_stims_on_amb

1. Authorize LENA command L_TOF_BIT_ON to turn on the LENA pul	sers
2. Goto Nominal HK screen	
Check to see that Built-in-test is "on"	PASS
3. Goto Singles screen (Scince-2 on LENA-2 machine)	
Check to make sure the stop count rate shows values around 300	PASS
4. Goto newtof2.scr (part of Event)	
Check to make sure the tof spectrum has events in it	PASS
Script lena_sff_hv_amb OR lena_sff_lv_amb (they are the same proced	lure)
1. Goto Normal HK Screen. Check:	
LENA's software version is 31 LENA's program mode is "RAM"	PASSPASS
2. Goto ptest screen	
Check status of Critical HK (should pass) Check status of TOF overcount (should pass) Check status of Memory (should pass)	PASS PASS PASS
3. Note that the TOF subsystem test will probably fail and the two HVPS executed.	tests are not
4. Authorize LENA command L_TOF_BIT_ON to turn on the LENA pul	sers
5. Goto Nominal HK screen	
Check to see that Built-in-test is "on"	PASS
6. Goto Singles screen (Scince-2 on LENA-2 machine)	
Check to make sure the stop count rate shows values around 300	PASS
7. Goto newtof2.scr (part of Event)	

Check to make sure the tof spectrum has events in it	PASS
8. Authorize the block of five no op commands.	
9. Goto Nom HK screen.	
Verify that the number of commands increases by five	PASS
10. Authorize the block of twelve commands.	
11. Goto Nom2-HK (part of HK)	
a. L_SYS_HKQL_DSBL	
Check that Quick Look is disabled	PASS
b. L_SYS_HKDG_DSBL	
Check that Diagnostic is disabled	PASS
c. L_SYS_BIN_DSBL	
Check that Science Binned Data Pack is disabled	PASS
d. L_SYS_EVENT_DSBL	
Check that Direct Events is disabled	PASS
e. L_SYS_SNGLS_DSBL	
Check that Singles are disabled	PASS
12. Goto Nominal HK page	
13. Look in the TOF Binning section	
f. L_TOF_BIN_STRT1 BINDEF=10	
Check that MASS 1 Beg is 10	PASS
g. L_TOF_BIN_STOP1 BINDEF=20	
Check that MASS 1 End is 20	PASS

h. L_TOF_BIN_STRT2 BINDEF=40	
Check that MASS 2 Beg is 40	PASS
i. L_TOF_BIN_STOP2 BINDEF=50	
check that MASS 2 End is 50	PASS
14. Look at the General section	
j. L_TOF_BIT_DELAY DELAY=2	
Check that the Delay has been set to 2	PASS
k. L_TOF_TRSH_START CFDTRSH=12	
Check to make sure that the TOF start threshold is at decimal level 12	PASS
1. L_TOF_TRSH_STOP CFDTRSH=13	
Check to make sure that the TOF stop threshold is at decimal level 13	PASS
15. Authorize the block of thirteen commands.	
16. Goto Nom2-HK (part of HK)	
a. L_SYS_HKQL_EN	
Check that Quick Look is enabled	PASS
b. L_SYS_HKCM_EN c. L_SYS_HKDG_EN	
Check that Diagnostic is enabled	PASS
d. L_SYS_BIN_EN	
Check that Science Binned Data Pack is enabled	PASS
e. L_SYS_EVENT_EN	
Check that Direct Events is enabled	PASS

f. L_SYS_SNGLS_EN

Check that Singles are enabled	PASS
17. Goto Nominal HK page	
18. Look in the TOF Binning section	
g. L_TOF_BIN_STRT1 BINDEF=0	
Check that MASS 1 Beg is 0	PASS
h. L_TOF_BIN_STOP1 BINDEF=127	
Check that MASS 1 End is 127	PASS
i. L_TOF_BIN_STRT2 BINDEF=128	
Check that MASS 2 Beg is 128	PASS
j. L_TOF_BIN_STOP2 BINDEF=255	
check that MASS 2 End is 255	PASS
19. Look at the General section	
k. L_TOF_BIT_DELAY DELAY=7	
Check that the Delay has been set to 7	PASS
l. L_TOF_TRSH_START CFDTRSH=10	
Check to make sure that the TOF start threshold is at decimal level 10	PASS
m. L_TOF_TRSH_STOP CFDTRSH=10	
Check to make sure that the TOF stop threshold is at decimal level 10	PASS

Notes:

1. In the event one has difficulty finding the desired screen, one can always bring up the screen by selecting it from File-Open (should be ILENA directory)

session.	on the schedule, o	no may want t	o turn the ree	order on unter	2220 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2